

Fuel Facility Instructions

NOTE: You operate this fuel facility at your own risk

Please be careful and follow all instructions.

Take this instruction sheet and the padlock key to the fuel facilities.

1. Open the padlock on the gate for the fuel you require.
2. Extend the ground strap on the left side of the hose drum through the fence and connect to your aircraft.
3. Place the ladder, if required, at the appropriate location by your aircraft.
4. Extend the hose through the gate to your aircraft; place the nozzle in your aircraft's fuel tank.

PAYMENT- will accept Debit and Credit. There are separate facilities and cupboards for AV Gas and Jet A-1 fuel however if using AV Gas, to access the Point-of-Sale payment system (Multi-Pass), you will need to open the padlock on the Jet A-1 facility fence.

MAKE SURE THE FUEL PUMP IS IN THE OFF POSITION PRIOR TO INSERTING YOUR PAYMENT CARD OR THE PAYMENT SYSTEM WILL NOT WORK.

Jet A-1 Fuel is PUMP 2

AV Gas is PUMP 1

Fueling instructions for each type of fuel are attached to the fuel area. Once you activate the pump, you have under 2 minutes to start before the pump times out. If this happens, you will need to start the payment process again.

**** Please do not forget to turn off the pump when you are finished.**

We hope you enjoy your visit to the Valemount area. For more information visit:
www.valemount.ca or www.visitvalemount.ca